


INTRO

» INSTRUCTIONS OF USE

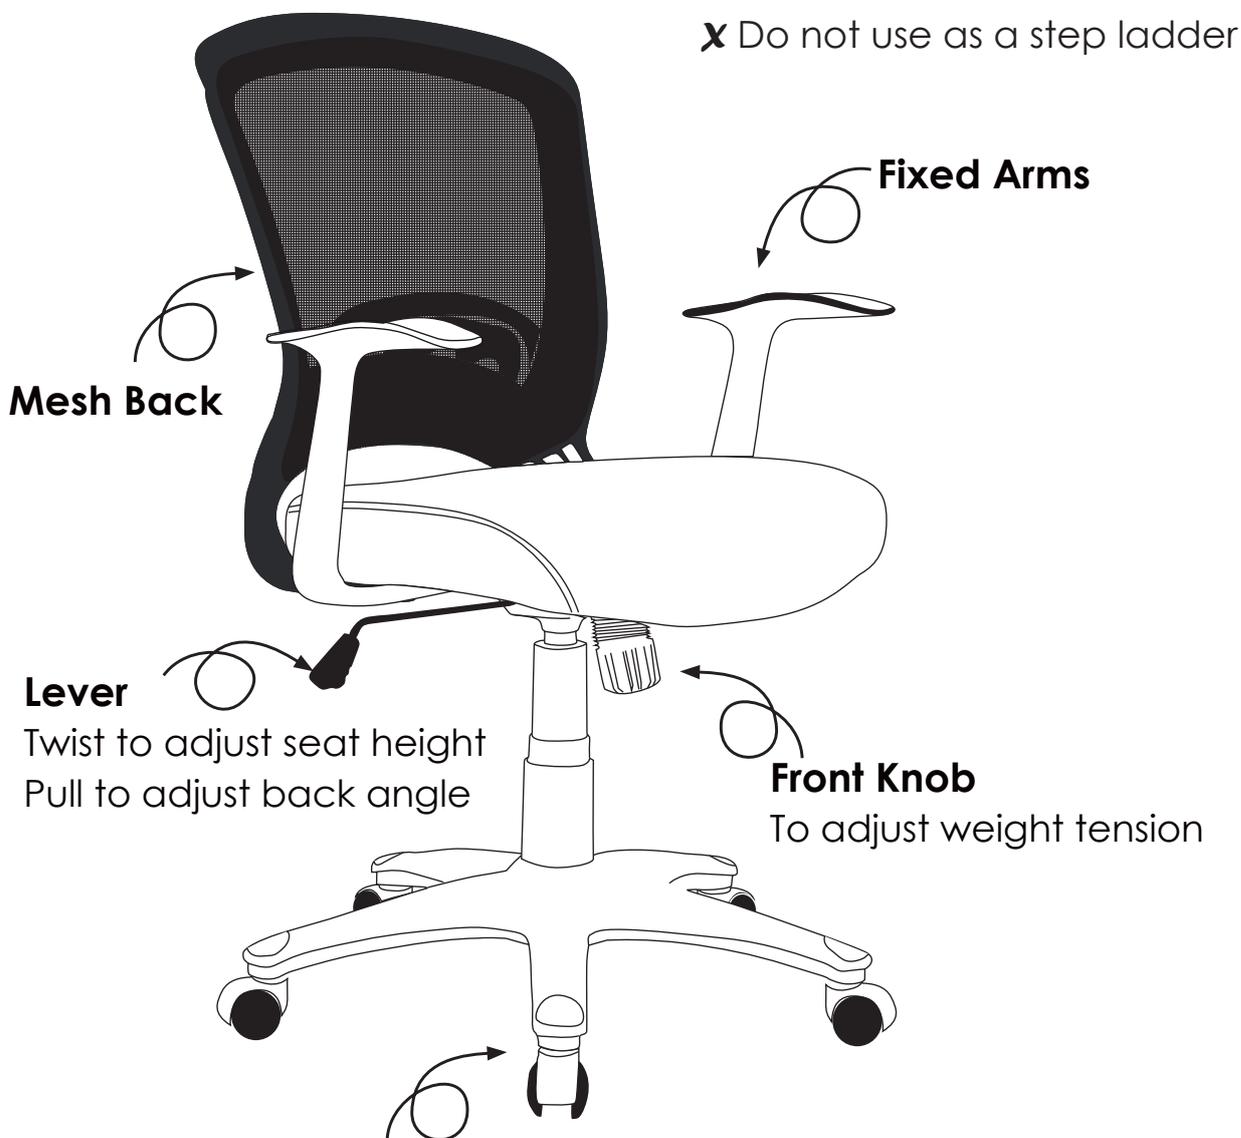

Five-star Base and Castors

Use soft tyred castors for tiles
Use hard tyred castors for carpet

- » Vacuum regular
- » Regularly adjust mechanism angle
- » Regularly adjust gas height
- » All warranty claims to be forwarded to place of purchase
- » Warranty covers components and workmanship only
- » Damage or wear and tear not covered by warranty
- » Misuse or abuse will not be covered under warranty