## RAZOR

### » INSTRUCTIONS OF USE



**X** Do not use as a step ladder



# **OPTIONAL ADJUSTABLE HEADREST** LEFT LEVER To adjust seat ADJUSTABLE ARMS **ADJUSTABLE LUMBAR RIGHT LEVER** To adjust seat height

## **645MM HIGH ARCH BASE WITH CASTORS**

Use soft tyred castors for tiles Use hard tyred castors for carpet

- » Vacuum regular
- Regularly adjust mechanism angle »
- » Regularly adjust gas height
- All warranty claims to be forwarded to place of purchase »
- » Warranty covers components and workmanship only
- » Damage or wear and tear not covered by warranty
- Misuse or abuse will not be covered under warranty »

#### **INDOOR USE ONLY**

# **INNER LEFT LEVER** To adjust seat depth (seat slider)

and back angle