

# SPIRAL

## » INSTRUCTIONS OF USE



**X** Do not use as a step ladder

To adjust back height hold back with two hands while seated and raise to desired height

To lower the back height raise back all the way to the top and release slowly

**Optional Adjustable Arms**

**Right Back Lever**

To adjust back angle

**Right Middle Lever**

To adjust seat angle

**Right Front Lever**

To adjust seat height

**Front Knob**

To adjust weight tension

**Five-star Base and Castors**

Use soft tyred castors for tiles

Use hard tyred castors for carpet

- » Vacuum regular
- » Regularly adjust mechanism angle
- » Regularly adjust gas height
- » All warranty claims to be forwarded to place of purchase
- » Warranty covers components and workmanship only
- » Damage or wear and tear not covered by warranty
- » Misuse or abuse will not be covered under warranty